


Replacement of wheels - Rear



1) Insert cutter blade between white plastic cap and wheel


Important: do not use screw driver !

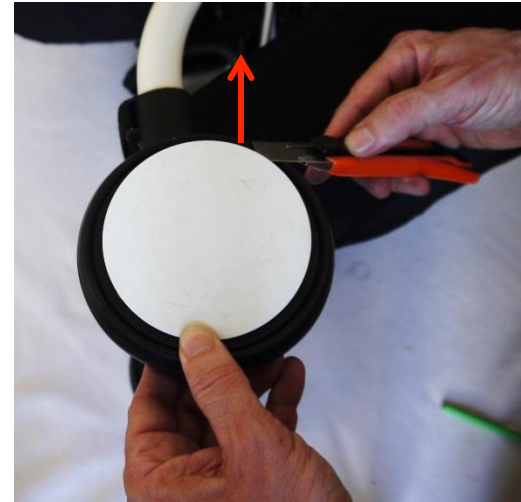

2) Lift to unclip white plastic cap



3) Unscrew wheel

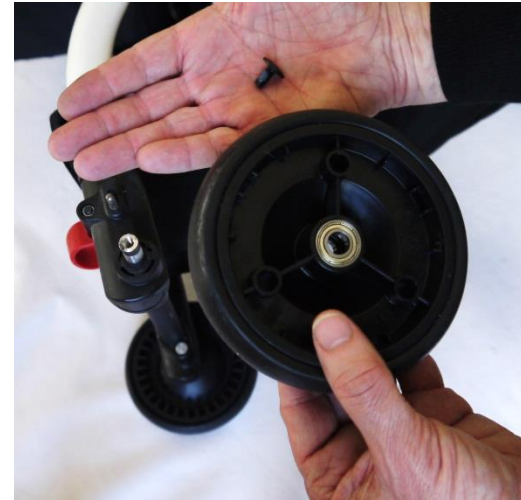


4) Take off wheel, and save screw

Replacement of wheels - Rear




5) Install new wheel

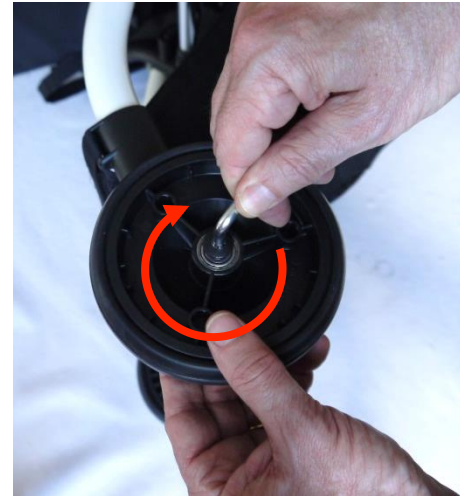

6) Install screw and tighten firmly




7) Position white cap over wheel

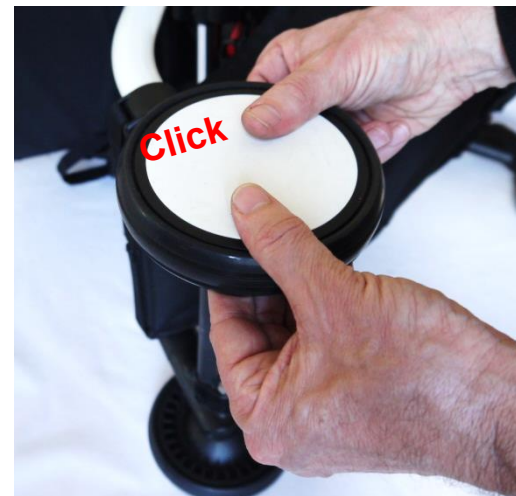

8) Press to clip

Replacement of wheels - Front

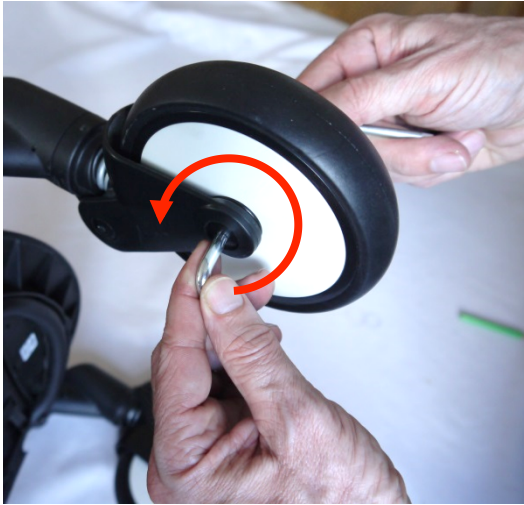

1) Using pair of L-shape tools, unscrew front wheel



2) Take out wheel axle



3) Remove wheel, save axle, screws and O washers



4) Install new wheel, with O washers on each side

Replacement of wheels - Front



5) Insert wheel axle through first O washer



6) Flip wheel, and using pencil or screwdriver, center second O washer



7) Insert screw



8) Using pair of L-shape tools, screw tightly